

PART NO.

TK	1	BODY
TK	2	CYLINDER
TK	3	CYLINDER BOLT, NUT 7 LOCK WASHER
TK	4A	PISTON
TK	5A	PISTON SEAL
TK	6	STATIC END CAP O RING
TK	7	CYLINDER END CAP
TK	8	SPRING
TK	9	PISTON NUT & LOCK WASHER
TK	10	WASHER
TK	11	PISTON SHAFT
TK	12	OUTSIDE HINGING PLATES
TK	13	INSIDE HINGING ARM
TK	14	PISTON ROD PIN 7 COTTER KEY
TK	15	BLADE SHOULDER BOLT (2 REQUIRED)
TK	16	LOCKING NUT
TK	17	LOCK WASHER
TK	18	BLADE HINGING BODY BOLT
TK	19	SET OF BRASS SHOES
TK	20	SET OF BLADES
TK	20A	BLADES 4 1/2" OPENING
TK	21	LOCK NUT (2 REQUIRED)
TK	22	EXHAUST SEAT & SILENCER
TK	25	VALVE AIR COUPLING
TK	26	HANDLE AIR INTAKE O RING <i>O-Ring für Luftanschl. + Griff</i>
TK	27	AIR INTAKE O RING <i>O-Ring für Luftanschl.</i>
TK	28	AIR VALVE
TK	29	STATIC O RING (2 REQUIRED)
TK	30	AIR EXHAUST O RING
TK	31	BRASS AIR BODY
TK	32	BRASS TRIGGER PIN
TK	33	TRIGGER
TK	34	EYE BOLT
TK	35	PISTON CUSHION
TK	36	EXHAUST SEAL O RING
TK	39	REGULATOR
TK	40	LUBRICATOR
TK	41	BRONZE BEARING
TK	42	GAUGE
TK	43	AIR HOSE
TK	45	COMPLETE SET OF O RINGS
TK	46	TRIGGER ASSEMBLY # 25,27,28,29,31,31,32,33
TK	47	TRIGGER O RING KIT # 27, 30 AND 2 # 29
TK	50	HOSE QUICK DISCONNECT
TK	60	AUTOMATIC EXHAUST VALVE ASSEMBLY # 61,62,63,64
TK	61	AUTOMATIC EXHAUST VALVE BODY
TK	62	AUTOMATIC EXHAUST VALVE SEAT
TK	63	AUTOMATIC EXHAUST SEAL
TK	64	AUTOMATIC EXHAUST O RING
TK	65	PLASTIC TUBE FITTING
TK	66	PLASTIC TUBE
TK	67	PLASTIC SLEEVES (FERRELS)
TK	68	O RING EXTRACTOR KIT
TK	69	ELECTRIC BLADE SHARPENER
TK	70	BLADE SHARPENER STONE
TK	71	SHOCK CUSHION
TK	75	SPARE PARTS KIT # 8,9,10,11,12,13,14,16,17,18,33,71, AND 2 # 15, 21
TK	76	BLADE GUARD, AND TRIGGER GUARD
TK	77	TRIGGER GUARD
TK	78	Body Chosen